FLUSH MOUNT

GEOCHRON

Figure "F"

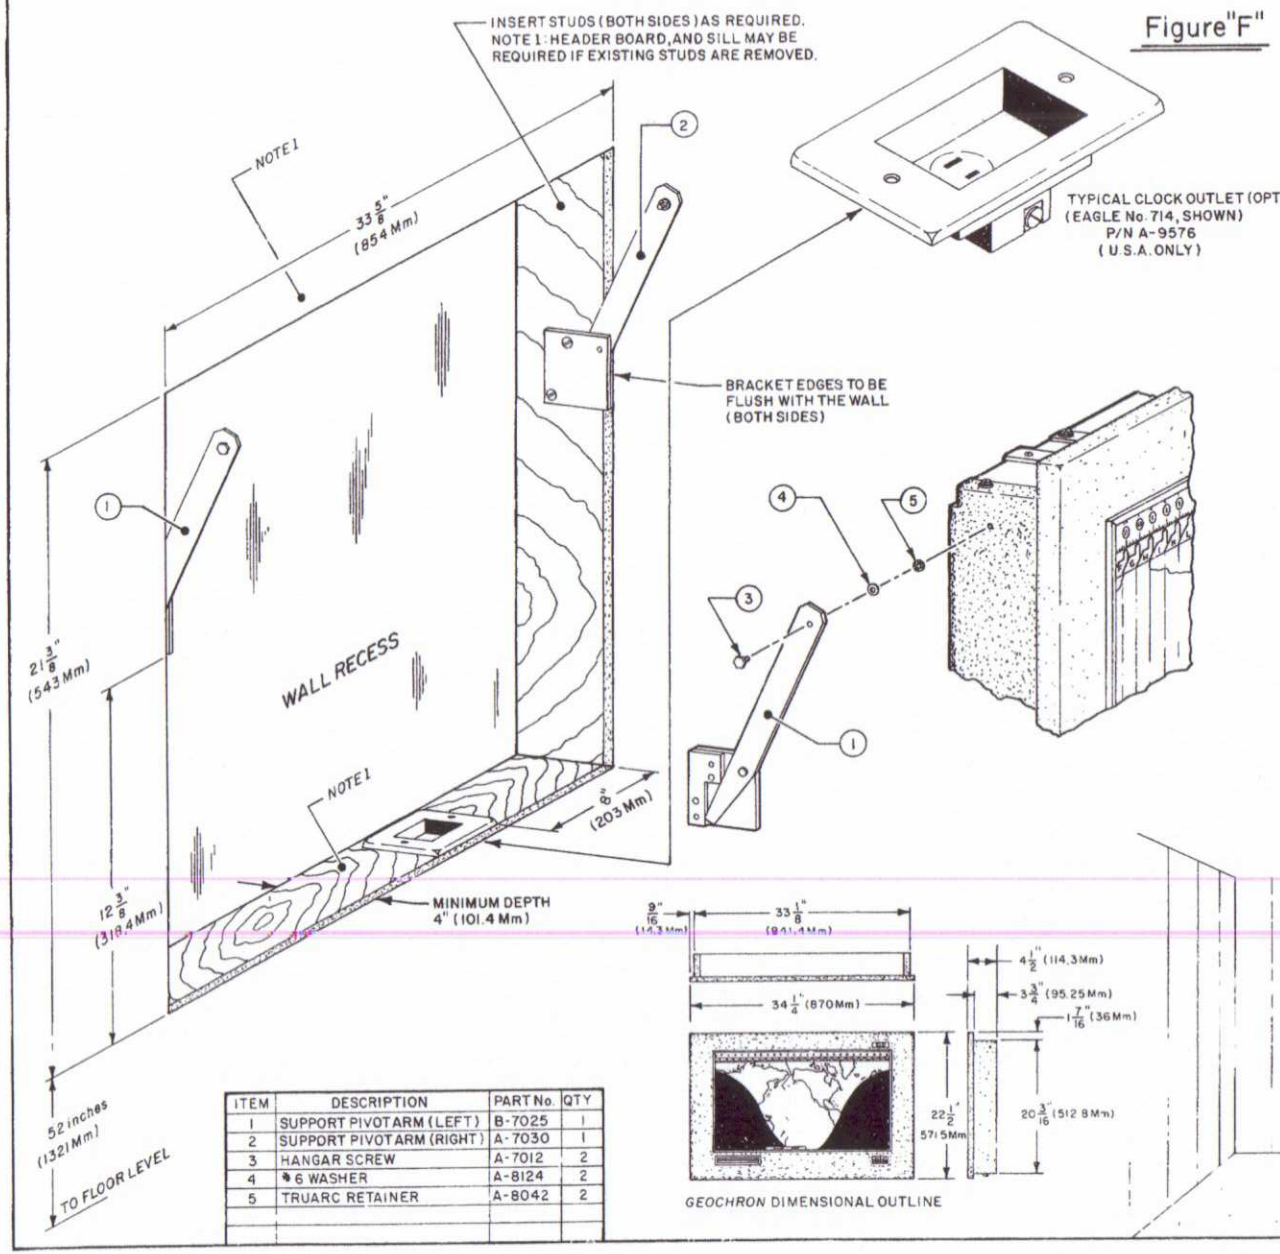

ITEM	DESCRIPTION	PART No.	QTY
1	SUPPORT PIVOTARM (LEFT)	B-7025	1
2	SUPPORT PIVOTARM (RIGHT)	A-7030	1
3	HANGAR SCREW	A-7012	2
4	#6 WASHER	A-8124	2
5	TRUARC RETAINER	A-8042	2

GEOCHRON DIMENSIONAL OUTLINE

FLUSH MOUNTING GEOCHRON requires special "flush mounting brackets" and a recess in the wall as shown. The recess must be of the exact size indicated. The 12 3/8 inch (318.4 Mm) distance from the bottom of the recess opening to the bottom edge of the mounting bracket is critical and must be exact. The front edge of the mounting brackets must be flush with the surface of the wall. (Two studs must be inserted and fastened at each side of the opening for secure mounting of the brackets.)

A shoulder screw, washer and retaining ring are provided to secure the mounting brackets to the Geochron, as indicated.

The recessed elctrical outlet must be placed so that the Geochron electrical cord and plug do not interfere with the control knobs (8" from the right of the recess, as shown.)

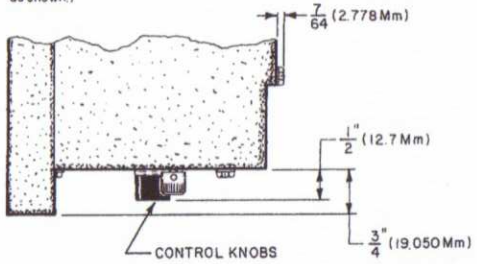

CAUTION: Inspect the Geochron after it is placed into the wall recess to insure that its control knobs do not come to rest on the bottom ledge of the recess.

The special "flush mount brackets" enable you to swing the Geochron out of the recess to gain access to the (control) setting knobs.
When returning the unit into the recess gently push in the top edge first, then the bottom edge.
When pulling the unit out, pull out the bottom edge first, then the top edge.

NOTE: All recess dimensions ± 1/8 of an inch. (3.175 Mm)
Except the 12 3/8 bracket dimension, maintain within ± 1/16 of an inch (1.587 Mm)

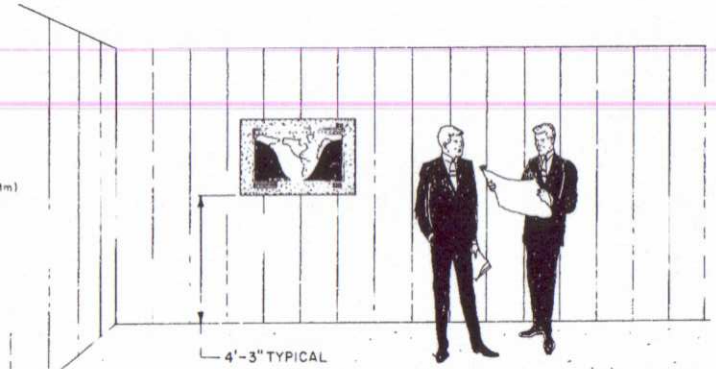

R. Quartermain 11-3-87